



Special "channels" ensure that the CMT is securely locked in place.



The steel CMT backing plate



Place the backing plate on your angle grinder.



CMT backing plate on angle grinder



Use your standard locking nut to fasten the backing plate in place.



Match the CMT "loading" to the backing plate.